CORNING

Closet Connector Housing (CCH) Recess Mounting Kit

003-902, Issue 2

1. Tools and Materials Required

- Phillips-head screwdriver

2. Installation

Step 1: Remove existing mounting brackets.

Step 2: Install brackets from kit using applicable hole pattern as shown.

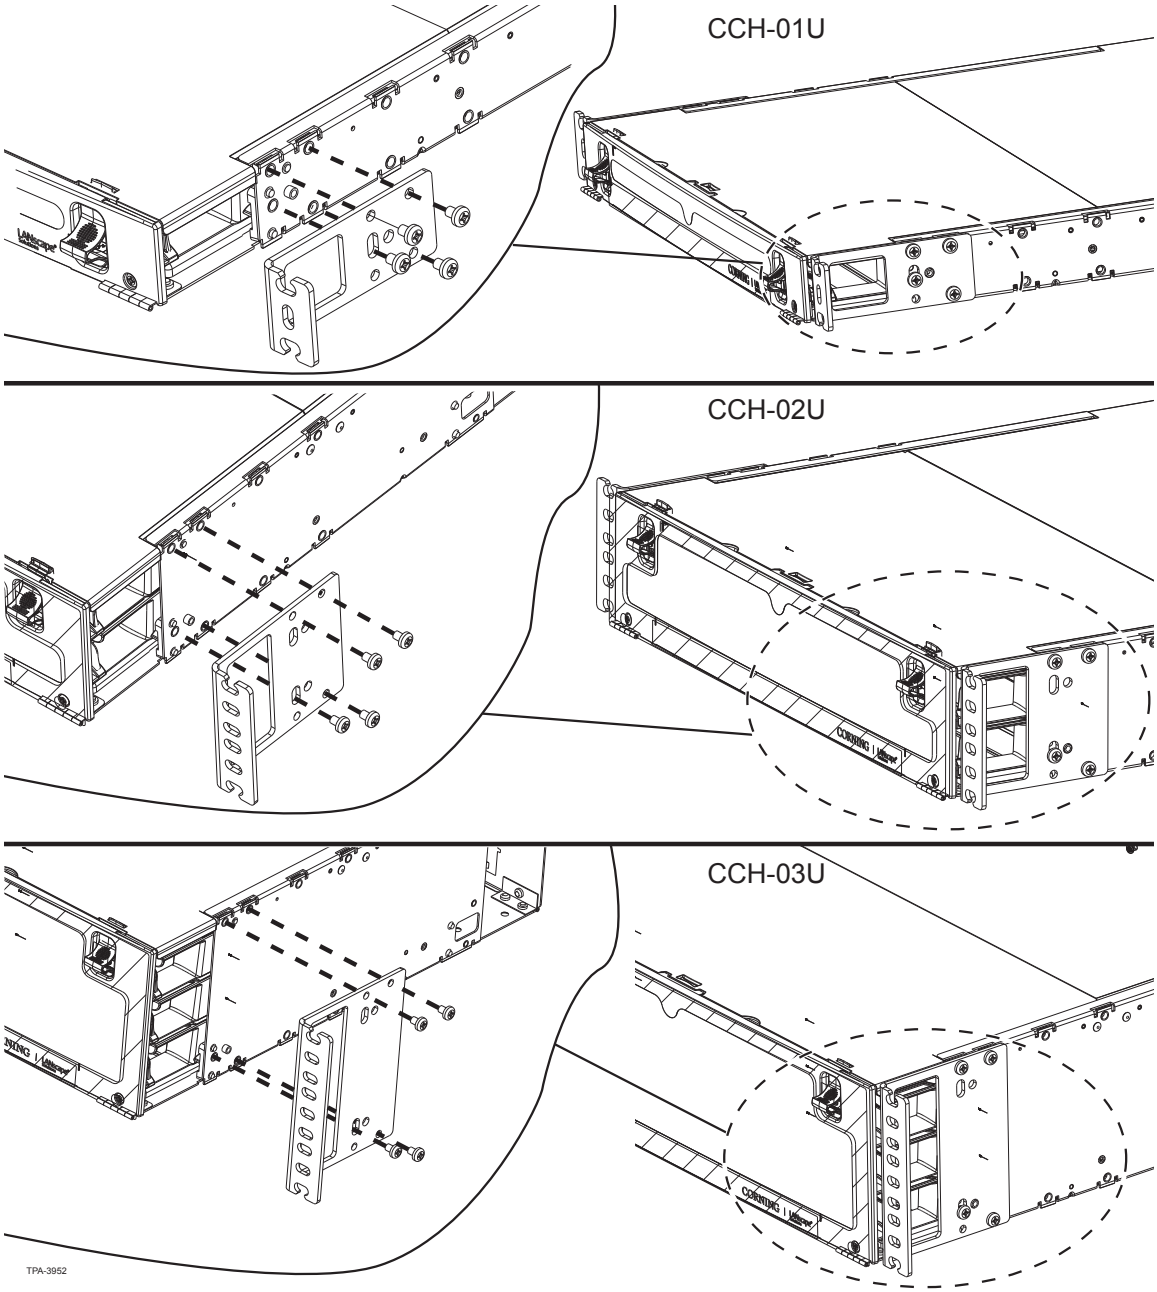

Step 3: Install housing into the frame per the instructions provided with the housing at the depth shown below.

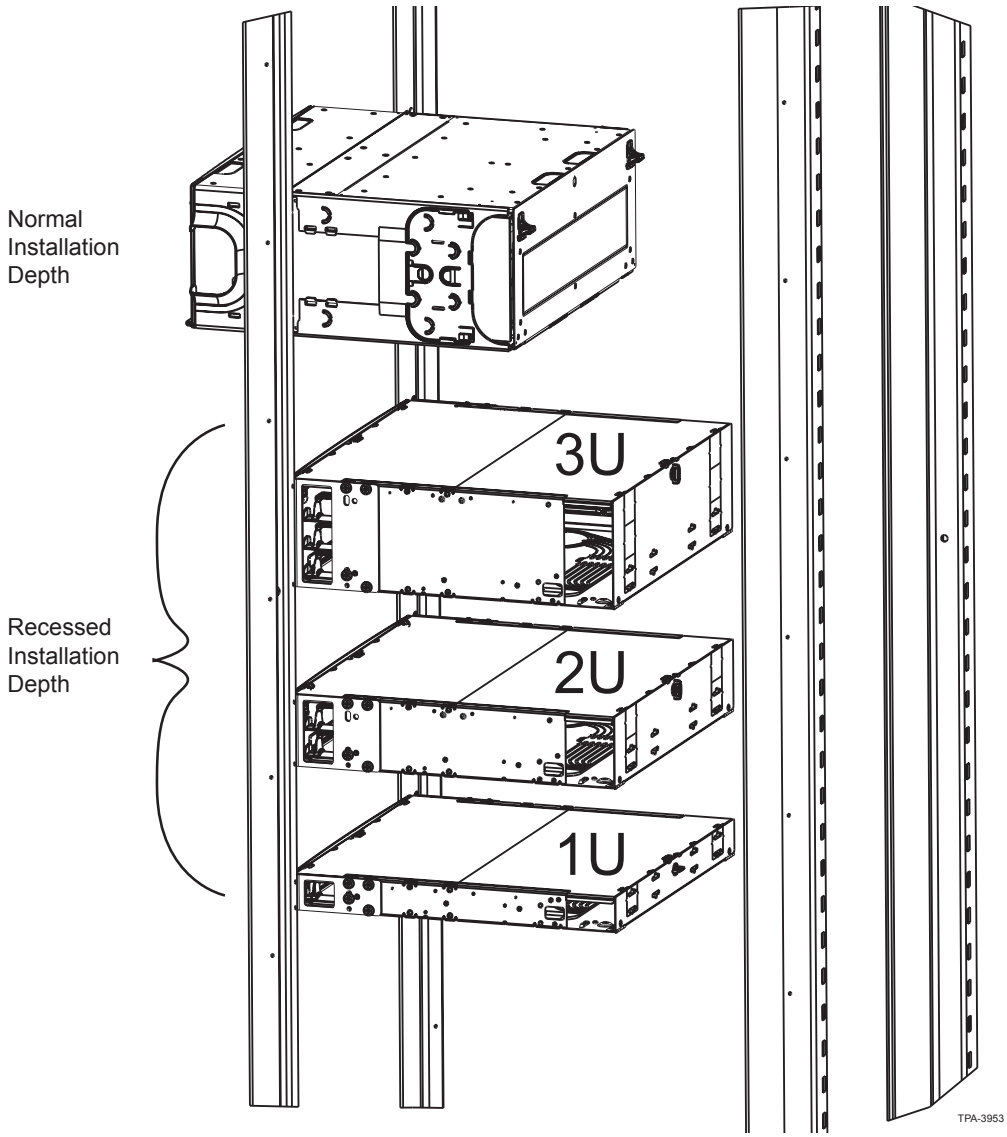

Corning Optical Communications LLC • PO Box 489 • Hickory, NC 28603-0489 USA
800-743-2675 • FAX: 828-325-5060 • International: +1-828-901-5000 • www.corning.com/opcomm

Corning Optical Communications reserves the right to improve, enhance, and modify the features and specifications of Corning Optical Communications products without prior notification. A complete listing of the trademarks of Corning Optical Communications is available at www.corning.com/opcomm/trademarks. All other trademarks are the properties of their respective owners. Corning Optical Communications is ISO 9001 certified. © 2011, 2015 Corning Optical Communications. All rights reserved.